


ANKER


SERIES **3**

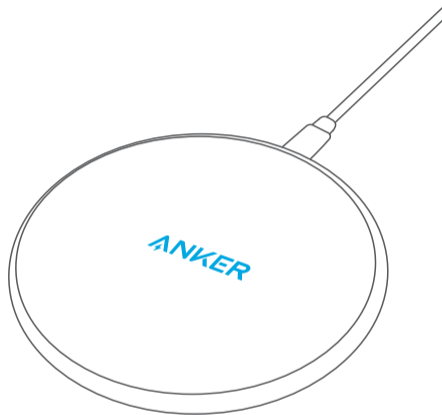


**Anker 318 Wireless Charger
(Pad)**

QUICK START GUIDE

1

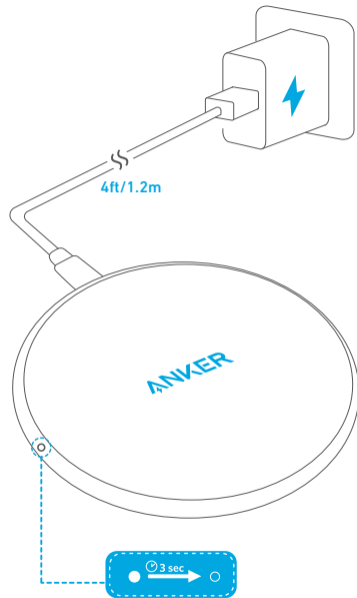

2

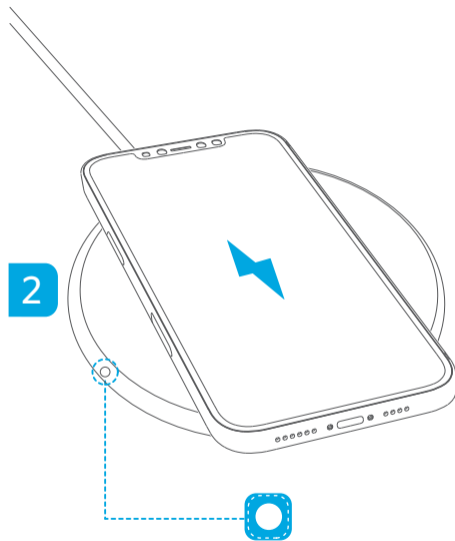

For tutorial videos, FAQs, manuals, and more information, please visit:

<https://support.anker.com>

Or scan the QR code below:



@anker_official
@anker_jp



@AnkerDeutschland
@AnkerJapan
@Anker







@AnkerOfficial
@Anker_JP

PAP 22
Raccolta Carta

Product Number: A2548
51005003923 V01

  3

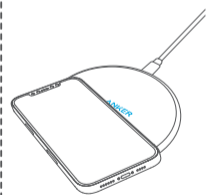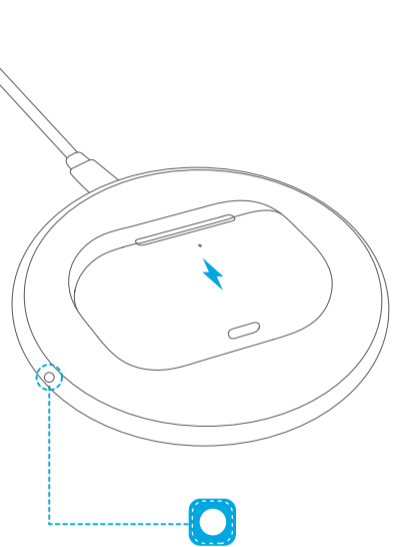

	Apple	iPhone 14 / iPhone 14 Pro / iPhone 14 Pro Max / iPhone 14 Plus / iPhone 13 / 13 Pro Max / 13 mini / 13 Pro / 12 / 12 Pro Max / 12 mini / 12 Pro / 11 / 11 Pro Max / 11 Pro / SE (2nd generation) / XS / XS Max / XR / X / 8 / 8 Plus
	Samsung	Note20 / Note20 Ultra / Note10+ / Note10 / Note9 (10W fast charging) / S22 / S21 / S21+ / S21 Ultra / S20+ / S20 / S20 Ultra / S10+ / S10 / S10e
	Google	Pixel 6 / Pixel 5 / Pixel 4 / Pixel 4XL
	LG	V30 / V30+ / G7 / V35 / V40
	Apple	AirPods 3 / AirPods Pro / AirPods 2 (with wireless charging case)
	Samsung	Galaxy Buds / Buds+ / Buds Pro / Buds Live
	Anker	Soundcore Liberty Air 2 / 2 Pro / Air 2 Pro