




At a Glance

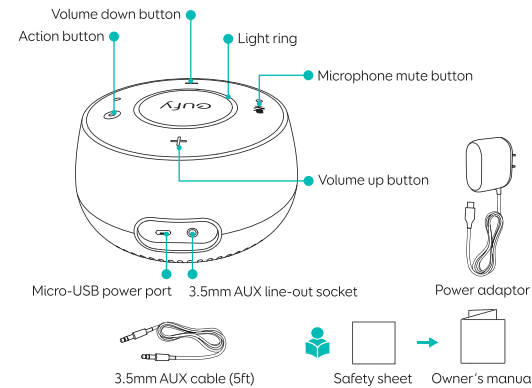

Action button:

- Press to start/stop voice control;
- Press and hold for 5 seconds to reset the Wi-Fi connection.
- When Eufy Genie is not connected to a network, press to hear system status.

► 01


Microphone mute button:

- Press to mute or unmute microphone.

Action button + Microphone mute button:

- Press both buttons simultaneously and hold for 5 seconds to restore Eufy Genie to factory settings.

Connecting to Power Supply

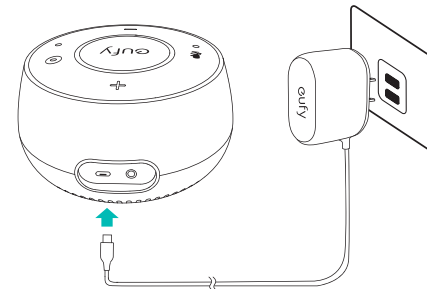

Use the adaptor to connect Eufy Genie to a power outlet.

- Eufy Genie will automatically turn on when plugged in.

► 02

Downloading the EufyHome App

What you need:

- A Wi-Fi router supporting the 2.4 GHz and 802.11 b/g/n bands; the 5 GHz band is not supported.
- A smartphone or tablet connected to a Wi-Fi network.
- A smartphone or tablet running iOS 8.0 (or above) or Android 4.3 (or above).



Download the EufyHome app from the App Store (iOS devices) or Google Play (Android devices).

► 03

Connecting to a Wi-Fi Network

- 1 In the EufyHome app, tap the "+" icon on the top right to add "Eufy Genie" to your EufyHome account.
- 2 Follow the prompt to change your Wi-Fi network to "Eufy Genie-XXXX".
- 3 Return to the EufyHome app. Follow the on-screen instructions to complete Wi-Fi configuration.
- 4 Sign in with your Amazon account to use Alexa voice control. If you do not have an Amazon account, create a new account.
 - Now you can control Eufy Genie with your voice.


- To access more features provided by the Alexa service, download the Amazon Alexa app.
- The instructions in this manual are for your reference only. The app will be updated from time to time. Always follow the instructions in the app to complete Wi-Fi setup.

► 04

Talking to Eufy Genie

Say the wake word "Alexa" first and then your request.


- Eufy Genie will respond instantly.
- To learn more commands to ask Alexa, see the "Things to Try" instructions printed on the package.

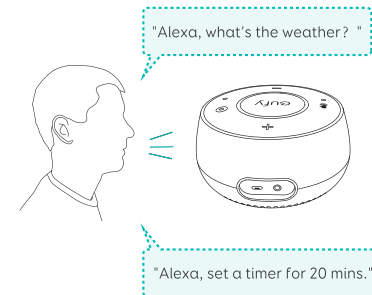

- You can use Eufy Genie to play music, answer questions, report the news/weather, control smart devices, and access more features.

► 05

Connecting to an External Speaker

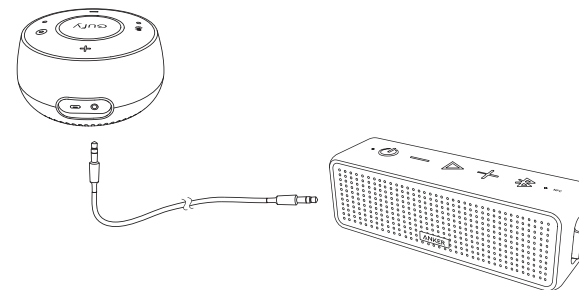

You can connect Eufy Genie to an external speaker with the supplied AUX cable.

- For best performance, make sure the external speaker is placed as far away from Eufy Genie as possible.

► 06

Troubleshooting

1. Eufy Genie cannot connect to your Wi-Fi network.

- Make sure Eufy Genie is connecting to a 2.4GHz Wi-Fi network.
- Make sure the Wi-Fi network name or the password you entered is correct. If it is incorrect, please try again.
- Check whether there are any internet connection problems. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.
- If there are too many devices connected to your wireless router at once, disconnect a few devices and try again.
- Press and hold the Action button for 5 seconds to reset the Wi-Fi connection.
- If you still cannot connect to your Wi-Fi network, restore Eufy Genie to factory settings.

2. Eufy Genie has lost Wi-Fi connection.

- Make sure the Wi-Fi network signal is strong. If the Wi-Fi signal is too weak, reset your wireless router and try again.
- If you still have this problem, unplug the adaptor, then plug in the adaptor to restart Eufy Genie.

3. Eufy Genie does not respond to Alexa voice commands.

- Make sure you have successfully logged in to your Amazon account with Eufy Genie.
- Check whether Eufy Genie has lost connection to the Internet.

► 07

- Check whether you use the proper commands when talking to Alexa. You should say the wake word "Alexa" first when making your request.
- Check whether the background noise is excessively loud. Please try again once the room is more quiet.
- Repeat your question. Speak naturally and clearly to Alexa in English.
- Make sure Eufy Genie is at least eight inches away from walls or other objects that may cause interference (such as microwave ovens).

4. When using services provided by third parties (such as listening to music, controlling smart devices, etc.), a voice prompt will ask you to log in to its account and get authorization from the third party. What should you do?

- Download and open the Alexa app, and then log in to your Amazon account. Find "Skills" from the menu, search for your desired skill, and then follow the on-screen instructions to enable the skill.

The Spotify Software is subject to third party licenses found here: www.spotify.com/connect/third-party-licenses.

► 08




Find compatible Eufy smart home products at www.eufylife.com



Product Model: T1240
51005000740

外観

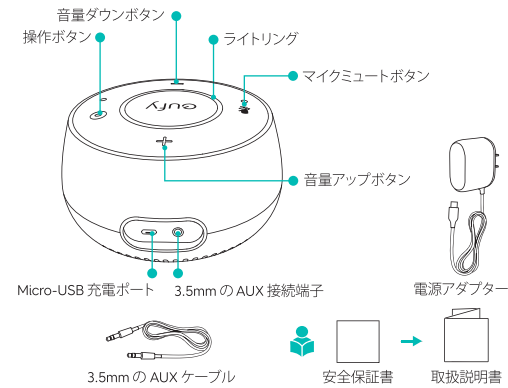

操作ボタン:

- ・ 押すと音声操作を開始 / 停止します。
- ・ 5 秒間長押しすると、Wi-Fi 接続をリセットします。
- ・ 本体がネットワークに繋がらない時にシステム状況を知らせます。

▶ 09


マイクミュートボタン:

- ・ 押すとマイクをミュートまたは解除します。

操作ボタンとマイクミュートボタン:

- ・ 両方のボタンを 5 秒間同時に押し続けると、本体を工場出荷時の初期設定に戻すことができます。

電源への接続方法

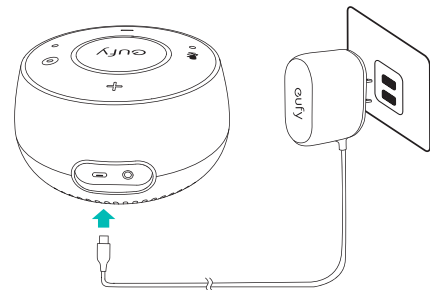

付属の電源アダプターを使ってコンセントと Eufy Genie を接続します。
▶ Eufy Genie がコンセントに接続されると自動で本体が起動します。

▶ 10

EufyHome アプリのインストール方法

インストールの際に必要なもの:

- ・ 2.4GHz 帯の 802.11 b/g/n に対応した Wi-Fi ルーター (5 GHz 帯には対応していません)。
- ・ Wi-Fi に接続されているスマートフォンもしくはタブレット端末。
- ・ iOS 8.0 以上、Android 4.3 以上のスマートフォンあるいはタブレット。



EufyHome を App Store (iOS 版) あるいは Google Play (Android 版) からダウンロードしてください。

▶ 11

Wi-Fi への接続方法


- 1 ダウンロードした EufyHome を開き、右上に表示されている “+” を押し、EufyHome アカウントに “Eufy Genie” を追加します。
- 2 ポップアップ画面に従って、“Eufy Genie-XXXX” という名前の Wi-Fi に接続します。
- 3 アプリに戻り、Wi-Fi 接続を完了させるために画面上の指示に従って、Wi-Fi 設定を完了させてください。
- 4 Alexa を使用するために、あなたの Amazon のアカウントでログインします。もし Amazon のアカウントを持っていない場合は、新規にアカウントを作成してください。
▶ これで、あなたの声で Eufy Genie を操作できるようになります。

💡 - Alexaにより提供されるその他の機能を利用される場合、Amazon Alexaアプリをダウンロードしてください。
- この取扱説明書に書かれている指示は製品発売当時のものです。アプリは今後更新され、操作が変更される場合がございます。Wi-Fi接続を完了させるために常にアプリの案内に従ってください。

▶ 12

Eufy Genie の操作方法


- “Alexa” と呼びかけて起動させてから、操作を行ってください。
▶ Eufy Genie はすぐに反応します。
- ▶ Alexa が対応するその他の機能については、Amazon Alexa アプリの「使い方の例」をご参照ください。

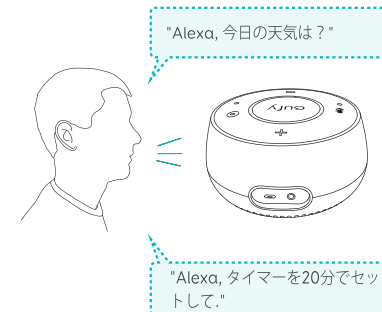

💡 音楽をかけたり、質問をしたり、ニュースや天気を尋ねたり、スマートデバイス进行操作したりする際に Eufy Genie を活用することができます。

▶ 13

外部スピーカーへの接続方法

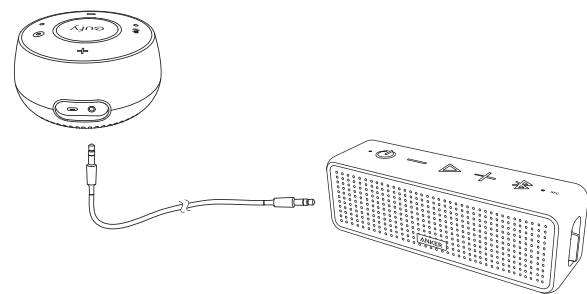

付属の AUX ケーブルを用いて本体と外部スピーカーを接続します。

💡 よりよい音質でお楽しみ頂くために、外部スピーカーをできる限り Eufy Genie から離れたところに設置してください。

▶ 14

トラブルシューティング

1. Eufy Genie が Wi-Fi ネットワークに接続することができません。

- ・ 2.4GHz 帯の Wi-Fi ネットワークに Eufy Genie を接続してください。
- ・ 入力された Wi-Fi ネットワーク名とログインパスワードが正しいことを確認してください。もし間違っていた場合は、正しい内容で再度試してください。
- ・ インターネット接続に問題があるかどうか確認してください。もし Wi-Fi 信号が弱すぎる場合は、Wi-Fi ルーターをリセットし、再度試してください。
- ・ 一度に大量のデバイスを Wi-Fi ルーターに接続している場合、不要なデバイスの接続を切断し、再度試してください。
- ・ 操作ボタンを 5 秒間長押しすると、Wi-Fi 接続をリセットできます。
- ・ 上記の手続きを行ってもなお Wi-Fi に接続できない場合は、Eufy Genie を工場出荷時の状態にリセットしてください。

2. Eufy Genie の Wi-Fi 接続が途切れてしまいます。

- ・ Wi-Fi 信号が十分強いかわ確認してください。Wi-Fi 信号が弱すぎる場合は、Wi-Fi ルーターを切り、もう一度試してください。
- ・ 依然問題が解決されない場合は、電源アダプターを一度コンセントから抜き、本体を再起動させるために再度電源アダプターをコンセントに差し込んでください。

3. Eufy Genie が “Alexa” に反応しません。

- ・ 自身の Amazon アカウントでログインできているか確認してください。

▶ 15

- ・ 本体がインターネットに接続されているかどうか確認してください。
 - ・ 正しく指示しているか確認してください。Eufy Genie を利用する際は最初に “Alexa” と呼びかけてから、質問や命令を伝える必要があります。
 - ・ 過度な騒音下で使用していないか確認してください。より静かな環境で再度試してください。
 - ・ もういちど質問を繰り返し述べてください。Alexa に対して自然かつはっきりと話しかけてください。
 - ・ 壁や電子レンジのような障害となる物からは、最低でも約 20cm は離れた場所へ Eufy Genie を設置してください。
- ### 4. サードパーティー製のサービスで音楽を聴いたリススマートデバイスを操作したりする際に、音声がサードパーティーのアカウントへのログインや権限のリクエストを要求してきます。
- ・ Alexa のアプリをダウンロードして開き、Amazon のアカウントでログインします。メニューより “スキル” を選び、お探しのスキルを見つけ、画面上の指示に従います。

Spotify のソフトウェアは以下のサードパーティーライセンスを課しています。
www.spotify.com/connect/third-party-licenses

▶ 16

Customer Service

カスタマーサービス

- 📞 18-Month Limited Warranty
18 ヶ月保証
- 🔧 Lifetime Technical Support
テクニカルサポート
- ✉ support@eufylife.com
- ☎ +1 (800) 988 7973 (US) Mon-Fri 9:00 - 17:00 (PT)
+44 (0) 1604 936200 (UK) Mon-Fri 6:00 - 11:00 (GMT)
+49 (0) 69 9579 7960 (DE) Mon-Fri 6:00 - 11:00
+81 03 4455 7823 (JP) 月 - 金 9:00 - 17:00
+86 400 0550 036 (中国) Mon-Fri 9:00 - 17:30

@AnkerJapan @anker_jp @anker_jp

▶ 17